

KinectIQ

Charging Cradle

User Manual


1 Components



Charging Cradle

Power Adapter

2 Product appearance

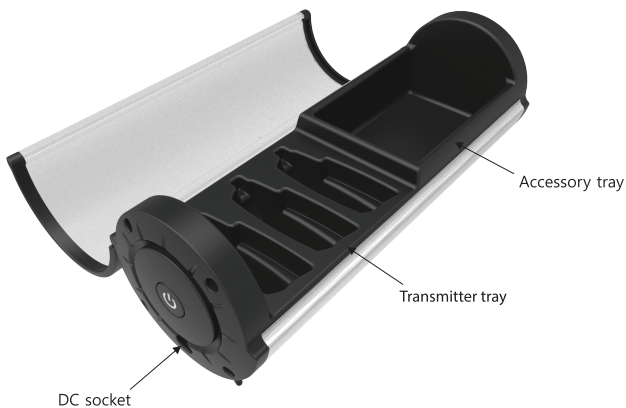

3 How to use

- 1 Connect Power Adapter at DC socket and plug into an electrical outlet.
- 2 Insert KinectIQ Transmitters to charging terminal of the Transmitter tray.
- 3 Charging LED on KinectIQ Transmitters will glow red when charging.
- 4 Charging LED will turn off when charging is complete.
- 5 When charging is complete, disconnect power adapter from charging cradle.

4 Charging LED on the transmitter

- 1 Red : On charging
- 2 Red blinking : The transmitter is ON. Please turn OFF the transmitter.
- 3 Clear : Charging completed

LED Color	Status	Description
No Light		No power Charging complete
RED	Solid	Charging
RED	Blinking	Transmitter is ON *Turn OFF the Transmitter in order to charge

5 Safety precautions

- Use only the power adapter provided. Do not modify.
- Unplug power cable from electrical outlet when not in use.
- Do not place heavy objects on power cable.
- If smoke, sound or smell is emitted from the device or power cable, stop using and unplug the AC power plug from the electrical outlet immediately.
- Do not place heavy objects on power cable.
- Do not expose the power cable to excessive heat.
- Ensure that the device and accessories do not get wet. If water gets into the device, disconnect the power supply immediately and unplug all the cables connected to the device.
- Ensure power cable is unplugged prior cleaning or moving the cradle.

6 Specifications

Size	309mm x 120mm x 110mm
Weight	800g
Input / Output	DC Socket(x 1) / micro 5pin USB (x3)
Power	AC 110-220V, 50/60Hz, 0.4A
Input	DC 5V/6A
Output	5V 3.6A
Max. rated power	18W
Operating Temperature	0°C ~ 40 °C
Charging time	Approx. 2.5 hours